


TAKE-A-LABEL

# Operations Manual TAL-610R

## Rewinder

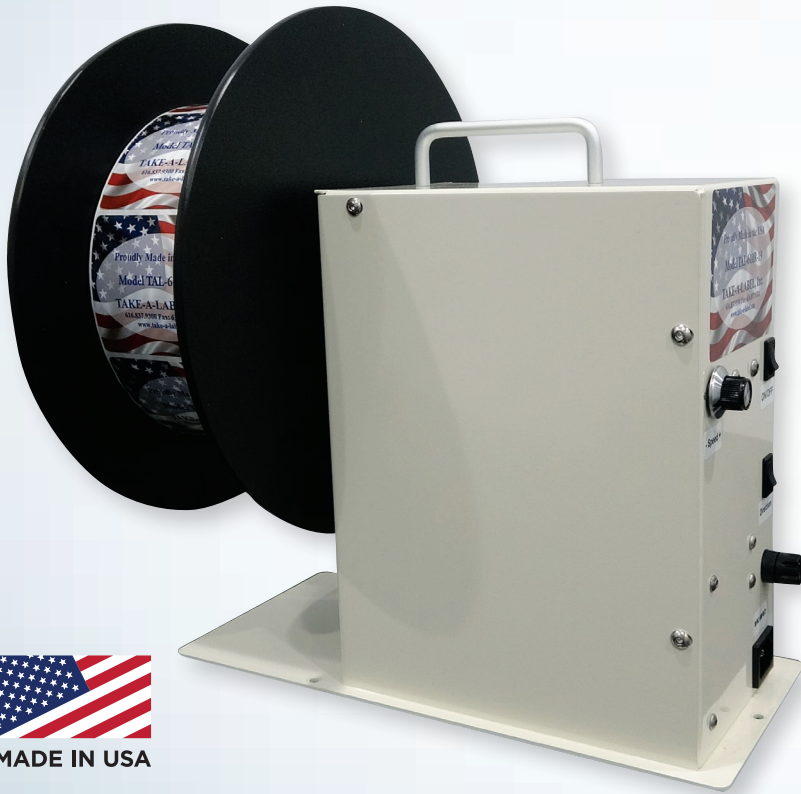

### TAL-610R REWINDER (DIRECT REWIND)

1. Slide first roll guide disc onto 3" expanding mandrel.
2. Slide core (Not Supplied) onto rewind shaft in-between the two roll guides.
3. Using tape, attach labels to the top or "12 o'clock position" on the 3" core.
4. Ensure that the Rewinder is square with printer, turn on Rewinder.

**NOTE:** Always load the Rewinder in the OFF position.

### TAL-610R REWINDER (WITH OPTIONAL DANCER ARM)

1. Your TAL-610R is shipped ready to use with the automatic speed adjusting dancer arm.
2. Slide core (Not Supplied) onto rewind shaft in-between the two roll guides.
3. Turn knob at end of expanding mandrel, until it holds the core tight.
4. Thread labels under dancer arm and tape to top or "12 o'clock position" on the 3" core.
5. Rotate rewind shaft 2-3 turns Counterclockwise.
6. Ensure that the Rewinder is square with printer.
7. Turn on rewinder. Machine will automatically wind up any excess material and increase or decrease speeds as necessary during label printing.

### TAL-610R PARTS LIST

Item	Description	Item	Description	Item	Description
45155	Fuse Holder	60016	Aluminum Handle	61003	Non-Dancer Control Board
45217	Power Cord	60018	Wave Washer	61007	TAL-610R Disc
60008	Rewinder Motor	600241	Amp Fuse	61005	On/Off Switch
60009	Transformer	61002	Cover	61006	Direction Switch
60012	3" Expansion Core				

[take-a-label.com](http://take-a-label.com) • [sales@take-a-label.com](mailto:sales@take-a-label.com) • 16900 Power Dr., Nunica, MI 49448 • 616.837.9300